



U.S. Department
of Transportation

**Federal Aviation
Administration**

Advisory Circular

Subject: Change 1 to Advisory Circular (AC) 150/5340-1H, STANDARDS FOR AIRPORT MARKINGS **Date:** 12/100 **AC No:** 150/5340-1H
Initiated by: AAS-310 **Change:** 1

1. PURPOSE. Advisory Circular (AC) 150/5340-1H, STANDARDS FOR AIRPORT MARKINGS, has been revised to increase the size of various holding position markings to improve conspicuity and, thereby, reduce surface incidents including runway incursions. This proposed change is based on input gathered from the industry and government officials attending the Runway Safety National Summit on June 26th, 2000, and the Regional Runway Safety Workshops held in each of Federal Aviation Administration's nine regions.


Other minor changes also are included to clarify existing standards for outlining markings in black, non-movement boundary markings, and surface painted holding position and direction signs. The figures associated with these standards have been revised.

2. PRINCIPAL CHANGES. Except for minor changes involving punctuation, spelling and grammar, all changes are marked with a vertical line in the left margin of each column. The following principal changes have been made:

- a. Paragraph 4, VISIBILITY OF MARKINGS, has been revised to clarify the markings that must be outlined with a black border.
- b. An Appendix 2 has been added to illustrate the acceptable layout of various markings outlined in black.
- c. Paragraph 7.c., RUNWAY DESIGNATION MARKING - COLOR, has been revised to encourage the use of a black border to increase visibility of runway designation markings on light colored pavements.
- d. Paragraph 23.d., RUNWAY HOLDING POSITION MARKINGS ON TAXIWAYS - CHARACTERISTICS, has been revised to increase the dimensions of the runway holding position marking and to specify conditions when an airport operator may maintain such markings to the current standard.
- e. Paragraph 24.d., HOLDING POSITION MARKINGS FOR INSTRUMENT LANDING SYSTEM/MICROWAVE LANDING SYSTEM (ILS/MLS) CRITICAL AREAS - CHARACTERISTICS, has been revised to increase the dimensions of the ILS/MLS critical area holding position marking and to specify conditions when an airport operator may maintain such markings to the current standard.
- f. Paragraph 26.b., SURFACE PAINTED HOLDING POSITION SIGNS - LOCATION Additional language clarifies location of surface painted holding position signs in relation to other surface painted signs.
- g. Paragraph 38.d., NON-MOVEMENT AREA BOUNDARY MARKING - CHARACTERISTICS, has been revised to provide standards for a taxiway centerline that intersects a non-movement area boundary.
- h. Figure 10, MARKING DETAILS, has been revised to reflect changes to runway holding position markings and ILS/MLS critical area holding position markings.
- i. Figure 13, SURFACE PAINTED SIGNS, has been replaced with a new diagram to show the use of surface painted signs on wide expanses of pavements and at complicated intersections.
- j. Figure 17, GEOGRAPHIC POSITION MARKING has been revised to reflect correct orientation of this sign and color has been added to the taxiway hold line and centerline.

PAGE CONTROL CHART

Remove Pages	Dated	Insert Pages	Dated
iii - iv	8/31/99	iii - iv	12/1/00
1 - 3	8/31/99	1 - 3	12/1/00
4	8/31/99	4	8/31/99
7-12	8/31/99	7	12/1/00
		8-9	8/31/99
		10-12	12/1/00
15-16	8/31/99	15	8/31/99
		16	12/1/00
27-28	8/31/99	27	8/31/99
		28	12/1/00
31-32	8/31/99	31	12/1/00
		32	8/31/99
35-36	8/31/99	35	12/1/00
		36	8/31/99
		Appendix 2	
		1-4	12/1/00

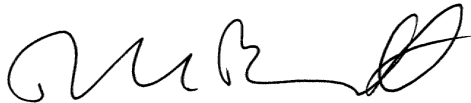

DAVID L. BENNETT
Director of Airport Safety and Standards

CONTENTS

CHAPTER 1. MARKINGS FOR PAVED RUNWAYS AND TAXIWAYS.	1
SECTION 1. GENERAL.	1
1. PURPOSE	1
2. DEFINITIONS.....	1
3. MARKING PRACTICES.....	1
4. VISIBILITY OF MARKINGS.	1
SECTION 2. RUNWAY MARKINGS	2
5. APPLICATION.	2
6. RUNWAY MARKING PRECEDENCE.....	3
7. RUNWAY DESIGNATION MARKING.	3
8. RUNWAY CENTERLINE MARKING	4
9. RUNWAY THRESHOLD MARKING.	4
10. RUNWAY AIMING POINT MARKING.	5
11. RUNWAY TOUCHDOWN ZONE MARKING	6
12. RUNWAY SIDE STRIPE MARKING.....	6
13. RUNWAY THRESHOLD BAR.	6
14. DEMARCATION BAR.	6
15. ARROWS AND ARROWHEADS.....	7
16. CHEVRONS	7
17. HOLDING POSITION MARKINGS ON RUNWAYS.....	7
18. RUNWAY SHOULDER MARKINGS.....	8
19. RESERVED	8
SECTION 3. TAXIWAY MARKINGS	9
20. APPLICATION	9
21. TAXIWAY CENTERLINE MARKINGS.....	9
22. TAXIWAY EDGE MARKING	9
23. RUNWAY HOLDING POSITION MARKINGS ON TAXIWAYS.....	10
24. HOLDING POSITION MARKINGS FOR INSTRUMENT LANDING SYSTEM/ MICROWAVE LANDING SYSTEM (ILS/MLS) CRITICAL AREAS.....	11
25. INTERMEDIATE HOLDING POSITION MARKINGS FOR TAXIWAY/TAXIWAY INTERSECTIONS.....	11
26. SURFACE PAINTED HOLDING POSITION SIGNS.....	11
27. SURFACE PAINTED TAXIWAY DIRECTION SIGNS	12
28. SURFACE PAINTED TAXIWAY LOCATION SIGNS	13
29. SURFACE PAINTED GATE IDENTIFICATION SIGNS.....	13
30. SURFACE PAINTED APRON ENTRANCE POINT SIGNS.....	13
31. TAXIWAY SHOULDER MARKINGS.....	14
32. GEOGRAPHIC POSITION MARKINGS.....	14
33. RESERVED	15
34. RESERVED	15
SECTION 4. OTHER MARKINGS	15
35. APPLICATION	15
36. VEHICLE ROADWAY MARKINGS.....	15
37. VOR RECEIVER CHECKPOINT MARKINGS	16
38. NON-MOVEMENT AREA BOUNDARY MARKING	16
39. MARKING OF TEMPORARILY RELOCATED THRESHOLDS.....	16
40. MARKING AND LIGHTING OF PERMANENTLY CLOSED RUNWAYS AND TAXIWAYS..	17
41. TEMPORARILY CLOSED RUNWAYS AND TAXIWAYS.....	17
42. CONVERTING A RUNWAY TO A TAXIWAY.....	17
43. INTERMITTENT USE OF A TAXIWAY AS A RUNWAY	17
44. CLOSED/ABANDONED AIRPORTS	18
45. HELIPORT MARKING.....	18
46. VERTIPOINT MARKING	18

47. MARKING FOR ARRESTING GEAR.....	18
48. HAZARDOUS AREAS	18

CHAPTER 2. (RESERVED) MARKINGS FOR LARGE AIRCRAFT PARKING POSITIONS.....18

CHAPTER 3. (RESERVED) MARKINGS FOR UNPAVED RUNWAYS FIGURES..18

FIGURES

Figure 1. Precision runway markings	19
Figure 2. Nonprecision runway and visual runway markings	20
Figure 3. Example of conflicting markings on crossing runways.....	21
Figure 4. Runway designation numerals and letters	22
Figure 5. Displaced threshold markings	23
Figure 6. Markings for taxiway aligned with runway	24
Figure 7. Markings for blast pads and stopways	25
Figure 8. Marking for blast pad or stopway or taxiway preceding a displaced threshold.....	26
Figure 9. Runway shoulder markings	27
Figure 10. Marking details.....	28
Figure 11. Taxiway markings	29
Figure 12. Taxiway centerline marking methods	30
Figure 13. Surface painted signs.....	31
Figure 14. Surface painted gate identification signs.....	32
Figure 15. Surface painted apron entrance point signs.....	33
Figure 16. Taxiway shoulder markings	34
Figure 17. Geographic position markings	35
Figure 18. Vehicle roadway markings	36
Figure 19. VOR receiver checkpoint markings	37
Figure 20. Closed runway and taxiway markings	38

APPENDIX 1. INSCRIPTIONS FOR SIGNS AND GEOGRAPHIC POSITION MARKINGS (5 PAGES)

Figure A-1. Pavement markings ABCDEFGH	1
Figure A-2. Pavement markings IJKLMNOP.....	2
Figure A-3. Pavement markings QRSTUVWX.....	3
Figure A-4. Pavement markings YZ123456	4
Figure A-5. Pavement markings 7890	5

APPENDIX 2. EXAMPLES OF MARKINGS OUTLINED IN BLACK

Figure B-1. Runway holding position marking	1
Figure B-2. ILS/MLS holding position marking	1
Figure B-3. Continuous taxiway edge line marking	2
Figure B-4. Dashed taxiway edge line marking	2
Figure B-5. Alternate outlining method for dashed taxiway edge line marking.....	2
Figure B-6. Taxiway centerline marking.....	3
Figure B-7. Taxiway/taxiway holding position marking	3
Figure B-8. Non-movement area boundary area marking.....	3

TABLES

Table 1. Runway marking elements	3
Table 2. Threshold stripes required for Configuration B	5
Table 3. Pairs of TDZ markings required when installed on both runway ends	6
Table 4. Location of holding position markings for runway/runway and runway/taxiway intersections	8
Table 5. Perpendicular distances for taxiway intersection markings from centerline of crossing taxiway	12

CHAPTER 1. MARKINGS FOR PAVED RUNWAYS AND TAXIWAYS.

SECTION 1. GENERAL.

1. PURPOSE. This chapter provides the standards for markings used on paved areas (runways, taxiways, aprons, and roadways) on airports. Markings for large aircraft parking positions and markings for unpaved runways will be addressed at a future date in Chapters 2 and 3 respectively.

2. DEFINITIONS. The following definitions apply to terms used in this AC:

a. Displaced Threshold. A threshold that is located at a point on the runway other than the designated beginning of the runway.

b. GPS Runway. A runway having a precision or nonprecision approach procedure utilizing GPS navigational guidance and vertical guidance.

c. Nonprecision Runway. A runway having an existing instrument approach procedure utilizing air navigation facilities with only horizontal guidance for which a straight-in or side-step nonprecision approach procedure has been approved.

d. Precision Runway. A runway having an existing instrument approach procedure utilizing air navigation facilities with both horizontal and vertical guidance for which a precision approach procedure has been approved.

e. Runway Threshold. The beginning of the runway that is available for landing.

f. Visual Runway. A runway having no straight-in instrument approach procedure.

3. MARKING PRACTICES. The following addresses some common practices used in airport marking.

a. Increasing the Friction Coefficient. The friction coefficient of the marking surface can be increased by spreading silica sand on the marked surface immediately after painting. Use of glass beads in the marking materials also has the side

benefit of increasing the friction coefficient of the marking surface. Glass beads or silica sand are required when durable markings (epoxy based and methacrylic based paints) are used. These paints are usually applied at 18 - 30 mils in dry thickness.

b. Striated Markings. Striated markings, which may be used in areas subject to frost heave, consist of painted stripes 4 inches (10 cm) to 8 inches (20 cm) in width separated by unpainted stripes. The width of the unpainted stripe may not exceed the width of the painted stripe. The predetermined width of the painted and unpainted stripes must be the same throughout the specific marking. A painted stripe is to begin and end the width of the markings. Since striated markings have a reduced visibility, more frequent maintenance is required to provide an acceptable marking system. Striated markings are not used on Category II and Category III precision runways.

c. Temporary Markings. In selecting a material for temporary markings, consider the difficulty of removing the marking when it is no longer needed. In this regard, some success has been realized by using water-based paint. Striated markings may also be used for temporary markings except for those used to denote a closed pavement or Category II and Category III runways.

d. Removal of Markings. Physically remove pavement markings that are no longer needed by sand blasting, chemical removal or other means, not by painting over them. Painting over the old markings merely preserves the old marking, will require additional maintenance, and in certain conditions, can be misleading to pilots.

4. VISIBILITY OF MARKINGS. Markings that cannot be seen by pilots and others operating on marked surfaces are useless. The following actions are intended to increase the visibility of markings at airports.

a. Increasing Visibility. The following two techniques have been successfully used to enhance markings. Use these two techniques in conjunction with each other, unless otherwise specified in this chapter.

(1) The contrast of a marking on light colored pavements can be increased by outlining all edges of the marking with a black border that is 6 inches (15cm) or greater in width. All holding position markings (as specified in Paragraphs 17, 23, 24, and 25) and non-movement area boundary markings (as specified in Paragraph 38) located on concrete pavement surfaces and light colored pavements are to be outlined with a black border. Outlining all other markings on such surfaces is strongly recommended, particularly for taxiway centerlines. Appendix 2 contains illustrations of the acceptable layout for various markings outlined in black.

(2) Glass beads are an effective means of highlighting pavement markings for operations occurring at night, during low visibility conditions, or during periods when the pavement surface may be wet. Glass beads should not be used in black paint.

b. Markings Requiring Glass Beads. Glass beads are required for the following permanent pavement markings:

(1) All runway and taxiway holding position markings.

(2) Runway threshold marking.

(3) Runway threshold bar.

(4) Runway aiming point marking.

(5) Runway designation marking.

(6) Runway touchdown zone markings.

(7) Runway centerline marking.

(8) Taxiway centerline marking.

(9) Geographical position marking.

(10) Surface painted signs.

(11) Non-movement area boundary markings.

c. Markings Recommended for Glass Beads. Glass beads are recommended for the following permanent pavement markings:

(1) Runway side stripes,

(2) Taxiway edge markings,

(3) Displaced threshold markings, and

(4) Demarcation bar.

d. Glass Beads Specifications. The glass beads used for the above applications should meet the specifications found in AC 150/5370-10A.

SECTION 2. RUNWAY MARKINGS

5. APPLICATION. Table 1 identifies the marking elements for each type of runway as shown in Figures 1 and 2. The two ends of a runway having different approach categories, i.e., visual vs. nonprecision, may have different markings. The markings on a runway may be upgraded to include elements that are not required. For example, side stripes, touchdown zone markings, etc., could be installed on a visual runway. If a runway has a displaced threshold,

blast pad, stopway, or wide shoulders, additional marking elements may be necessary. All elements should be of a corresponding size. For example, a 75-foot wide runway requires fewer threshold stripes and aiming point markings that are proportional to the runway width; however, the runway centerline width should remain at the minimum width for the runway category, e.g., visual runway – 12 inches.

TABLE 1. RUNWAY MARKING ELEMENTS.

Marking element	Visual runway	Nonprecision runway / GPS Nonprecision	Precision runway / GPS Precision
Designation (par. 7)	X	X	X
Centerline (par. 8)	X	X	X
Threshold marking (par. 9)	X ¹	X	X
Aiming point (par.10)	X ²	X ²	X
Touchdown zone (par. 11)			X
Side stripes (par. 12)	X ³	X ³	X

¹ Only required on runways used, or intended to be used, by international commercial transport aircraft.

² On runways 4,000 feet (1200 m) or longer used by jet aircraft.

³ Used when the full pavement width may not be available as a runway.

6. RUNWAY MARKING PRECEDENCE.

Where runways intersect, the markings on the runway of the higher precedence continue through the intersection, while the markings of the runway of the lower precedence are interrupted except that the runway threshold marking, designation marking, aiming point marking and touchdown zone markings are moved along the lower precedence runway to avoid the intersection area. Where aiming point markings need to be moved more than 200 feet (60 m), the threshold will have to be displaced or repositioned to retain the distance between the threshold to the aiming point marking (see Figure 3 for an example). The distance between the threshold and aiming point markings must be at least 1,000 feet. Whenever the distance between the threshold and aiming point markings is 1,200 feet or more, an airport operator may place a note in the Airport/Facility Directory (A/FD) which provides the distance that exists between the threshold and the aiming point markings. An airport with “closed V” intersections requires shifting the runway designation marking down the runway due to precedence of the intersecting runways. In this case, start at the inside corner of the intersection and perpendicular to the runway centerline, then move 20 feet down-runway from this baseline to locate the numeral position. For an intersection of runways of the same precedence order, the preferred runway (lowest approach minimums or most often used) is considered to be of a higher

precedence order. For marking purposes, the order of precedence, in descending order, is as follows:

- a. Precision runway, Category III.
- b. Precision runway, Category II.
- c. Precision runway, Category I.
- d. Nonprecision runway.
- e. Visual runway.

7. RUNWAY DESIGNATION MARKING.

a. Purpose. A runway designation marking identifies a runway by its magnetic azimuth.

b. Location. Runway designation markings, as shown in Figures 1 and 2, are located on each end of a runway.

c. Color. Runway designation markings are white. It is particularly helpful to pilots if these markings are outlined in black on light colored pavements (see paragraph 4(a)(1)).

d. Characteristics. A runway designation marking consists of a number and, on parallel runways, is supplemented with a letter. A single-digit runway designation number is not preceded by a zero. On a single runway, dual parallel runways and triple parallel runways, the designation number is the whole number nearest

one-tenth of the magnetic azimuth when viewed from the direction of approach. For example, where the magnetic azimuth is 183 degrees, the runway designation marking would be 18; and for a magnetic azimuth of 87 degrees, the runway designation marking would be 9. For a magnetic azimuth ending in the number “5,” such as 185 degrees, the runway designation marking can be either 18 or 19. On four or more parallel runways, one set of adjacent runways is numbered to the nearest one-tenth of the magnetic azimuth and the other set of adjacent runways is numbered to the next nearest one-tenth of the magnetic azimuth.

(1) Parallel Runways. In the case of parallel runways, each runway designation number is supplemented by a letter, in the order shown from left to right when viewed from the direction of approach, as shown in the following examples:

(a) For two parallel runways having a magnetic azimuth of 182 degrees, the runways would be designated “18L,” “18R.”

(b) For three parallel runways having a magnetic azimuth of 87 degrees, the runways would be designated “9L,” “9C,” “9R.”

(c) For four parallel runways having a magnetic azimuth of 324 degrees, the runways would be designated “32L,” “32R,” “33L,” “33R.”

(d) For five parallel runways having a magnetic azimuth of 138 degrees, the runways would be designated “13L,” “13R,” “14L,” “14C,” “14R.”

(e) For six parallel runways having a magnetic azimuth of 83 degrees, the runways would be designated “8L,” “8C,” “8R,” “9L,” “9C,” “9R.”

(f) For seven parallel runways having a magnetic azimuth of 85 degrees, the runways would be designated “8L,” “8C,” “8R,” “9L,” “9C,” “9R,” “10.”

(2) There are some cases where parallel runway designation may not be appropriate because of possible pilot confusion with the runway surface or the distance between landing thresholds. For example a turf runway or a visual runway which are parallel to a higher precedence runway and have a distance between the landing thresholds may have a

different runway designation, specially if the paved runway has a paved parallel taxiway.

(3) The size and spacing of the numbers and letters are reduced only when necessary due to space limitations on narrow runways, and should be no closer than 2 feet from the runway edge or side strips if present. The numbers and letters are in the form and proportion shown in Figure 4.

8. RUNWAY CENTERLINE MARKING.

a. Purpose. The runway centerline marking identifies the physical center of the runway and provides alignment guidance during takeoff and landing operations.

b. Location. A runway centerline marking is located along the centerline of the runway between the runway designation markings.

c. Color. Runway centerline markings are white.

d. Characteristics. A runway centerline marking consists of a line of uniformly spaced stripes and gaps. The stripes are 120 feet (36 m) in length, and the gaps are 80 feet (24 m) in length. Adjustments to the length of the stripes and gaps, where necessary to accommodate the runway length, are made near the runway midpoint. The minimum width of the stripes is 36 inches (90 cm) for precision runways, 18 inches (45 cm) for nonprecision runways and 12 inches (30 cm) for visual runways. Centerline widths are not to be decreased even if all other marking sizes are proportioned narrower because of runway width.

9. RUNWAY THRESHOLD MARKING.

a. Purpose. A threshold marking identifies the beginning of the runway that is available for landing.

b. Location. The runway threshold markings start 20 feet from the runway threshold. This dimension may be increased to 30 feet from the runway threshold when a threshold bar is present. However, if a threshold bar is added after the runway threshold marking is already present, it is acceptable for the threshold marking to be located 20 feet from the threshold to preclude shifting the runway markings by 10 feet.

c. Color. Threshold markings are white.

b. Location. The demarcation bar is located on the blast pad, stopway or taxiway at the point of intersection with the runway. However, the demarcation bar is not part of the usable runway as shown in Figure 8.

c. Color. A demarcation bar is yellow.

d. Characteristics. A demarcation bar is 3 feet (1 m) wide and extends across the width of the blast pad, stopway or taxiway.

15. ARROWS AND ARROWHEADS.

a. Purpose. Arrows are used to identify a displaced threshold area and are useful for centerline guidance for takeoffs and/or rollouts. Arrowheads are used in conjunction with a threshold bar to further highlight the beginning of a runway where the use of chevrons is not appropriate.

b. Location. Where a runway threshold is permanently displaced, arrows and arrowheads are provided in the portion of the runway before the displaced threshold (see Figures 5 and 8). Where the pavement area preceding a runway is used as a taxiway, arrowheads are provided prior to the threshold bar (see Figure 6).

c. Color. Arrows and arrowheads used in a displaced threshold area are white. Arrowheads used on a taxiway prior to a runway threshold are yellow.

d. Characteristics. Dimensions and spacing of arrows and arrowheads are as shown in Figures 5 and 6, respectively.

16. CHEVRONS.

a. Purpose. Chevrons are used to identify pavement areas unusable for landing, takeoff, and taxiing.

b. Location. Chevrons are located on pavement areas that are aligned with and contiguous to the runway as shown in Figures 7 and 8, respectively.

c. Color. Chevrons are yellow.

d. Characteristics. Dimensions and spacing of chevrons are shown in Figure 7.

17. HOLDING POSITION MARKINGS ON RUNWAYS.

a. Purpose. These markings are installed on a runway where an aircraft is to stop when the runway is normally used as a taxiway or used for Land and Hold Short Operations (LAHSO) as identified in a letter of agreement with the Air Traffic Control Tower (ATCT). A runway should be considered as normally used for taxiing if there is no parallel taxiway and no ATCT. Otherwise, seek input from ATCT.

b. Location. Holding position markings for runway/runway intersections are located in accordance with Table 4 for the most demanding aircraft using the runway. These markings are normally located in the lower precedence runway. Holding position markings for operations involving "land and hold short of a taxiway" are also located in accordance with Table 4. Holding position markings for operations involving "land and hold short of a predetermined point or approach/departure flightpath" are located at the predetermined hold-short point. Moving the hold-short point away from the intersection does not necessitate redefining the type of land and hold short operation if an intervening taxiway or runway is present. For example, a hold-short point will be moved away from a runway/runway intersection just enough to allow both signs to be installed, clear of an intervening taxiway. The fact that the hold-short point is now prior to a taxiway does not necessitate conversion of the operation to "land and hold short of a taxiway." The signs would retain the runway designations. If instead, ATCT and the airport operator choose to convert the operation to "land and hold short of a taxiway," the hold-short point should be moved further back to meet the setback requirements from the taxiway, as indicated in Table 4. Also, any reduction to the minimum distances permitted in Table 4 must be coordinated with the regional Flight Standards Division and Airport Division.

c. Color. Holding position markings on runways are yellow and are outlined in black on light colored pavements.

d. Characteristics. These markings are identical to runway holding position markings on taxiways described in Paragraph 23 and shown in Figure 10. The solid lines of these markings are always on the side where the aircraft is to hold. The markings are installed

perpendicular to the runway centerline and interrupt all runway markings except for the runway designation marking. In the latter case, the holding position markings and related signs shall be adjusted along the runway so they do not interrupt

the designation marking. Markings should extend to the full width of the runway. Markings should not extend onto runway shoulders or onto taxiway fillets in the event of intervening taxiways.

TABLE 4. LOCATION OF HOLDING POSITION MARKINGS FOR RUNWAY/RUNWAY AND RUNWAY/TAXIWAY INTERSECTIONS.

Aircraft approach category and (airplane design group)	Perpendicular distance from runway centerline to intersecting taxiway/runway centerline in feet (meters) ¹	
	Visual / Nonprecision/ GPS Nonprecision runway	Precision /GPS precision runway ²
A & B (I & II) small airplanes only	125 (38)	175 (53)
A & B (I, II, & III)	200 (60)	250 (75)
A & B (IV)	250 (75)	250 (75)
C & D (I through IV)	250 (75)	250 (75)
C & D (V & VI)	250 (75)	280 (85)

¹ Increases for elevation above sea level are:

a. Aircraft approach categories A and B (airplane design group III and IV). For precision runways, this distance is increased one foot for each 100 feet of airport elevation above 6,000 feet.

b. Aircraft approach category C (airplane design group III and IV). For precision runways this distance is increased one foot for each 100 feet of airport elevation above 3,200 feet.

c. Aircraft approach category C (Airplane design group V). For all types of runways, this distance is increased one foot for each 100 feet of airport elevation above sea level.

d. Aircraft approach category D (Airplane design groups I through VI). For all types of runways, this distance is increased one foot for each 100 feet of airport elevation above sea level.

² When a taxiway or runway intersects a precision runway at an angle of less than 45 degrees, it is necessary to increase the distances in this column if any part of the critical aircraft would penetrate the obstacle free zone (See AC 150/5300-13).

18. RUNWAY SHOULDER MARKINGS.

a. Application. Runway shoulder markings are used, when needed, as a supplement to runway side stripes to identify pavement areas contiguous to the runway sides that are not intended for use by aircraft. Runway side stripes are usually sufficient in defining the limits of usable pavement. Shoulder markings are generally needed where pilots have experienced problems identifying the runway from the shoulder thereby creating a need to delineate the shoulder as unusable pavement.

b. Location. Runway shoulder markings are located between the runway side stripes and the pavement edge as shown in Figure 9.

c. Color. Runway shoulder markings are yellow.

d. Characteristics. Runway shoulder markings consist of stripes 3 feet (1 m) in width and spaced 100 feet (30 m) apart. The stripes start at the runway midpoint, are slanted at an angle of 45 degrees to the runway centerline, and are oriented as shown in Figure 9.

19. RESERVED.

SECTION 3. TAXIWAY MARKINGS.

20. APPLICATION. All taxiways should have centerline markings and runway holding position markings whenever they intersect a runway. Taxiway edge markings should be installed wherever there is a need to separate the taxiway from a pavement that is not intended for aircraft use or to delineate the edge of the taxiway that is not otherwise clearly visible. Instrument Landing System/Microwave Landing System (ILS/MLS) critical areas holding position markings, intermediate holding position markings where a taxiway/taxiway intersect, and taxiway shoulder markings should be installed as appropriate.

21. TAXIWAY CENTERLINE MARKINGS.

a. Purpose. Taxiway centerline markings provide a visual cue to permit taxiing along a designated path.

b. Location. On a straight section of a taxiway, taxiway centerline markings are provided along the centerline of the designated taxiway. On a taxiway curve, the markings continue from the straight portion of the taxiway at a constant distance from the outside edge of the taxiway.

(1) At taxiway intersections where fillets do not meet the standards of AC 150/5300-13, *Airport Design*, and judgmental oversteering is required, the centerline markings continue straight through the intersection as shown in Figure 12a. Where adequate fillets exist as determined by the most demanding aircraft, the centerline markings follow the taxiway curve, as shown in Figure 12b, to permit cockpit-over-centerline steering.

(2) At taxiway intersections with runway ends, the taxiway centerline is terminated at the runway edge except that the following applies:

(a) Where there is a displaced threshold the centerline continues into the displaced area of the runway.

(b) The taxiway centerline continues across the runway when it is a crossing route as designated by the local Air Traffic Facility.

(3) On all other taxiways, the taxiway centerline marking curves onto the runway and extends parallel to the runway centerline marking for a distance of 200 feet (60 m) beyond the point of tangency or terminating at the threshold bar, which ever is less and three feet from the runway centerline measured near edge to near edge. See Figure 11, detail A. This lead-in or lead-off line (the taxiway centerline) is interrupted for all runway markings.

(4) For taxiways crossing a runway, either straight across or offset and normally used as a taxi route, the taxiway centerline marking may continue across the runway but is normally interrupted for any runway markings. For low visibility operations, when the runway visual range is below 1200 feet (360 m), taxiway centerline markings continue across all runway markings with the exception of the runway designation marking.

c. Color. Taxiway centerline markings are yellow.

d. Characteristics. A width of 6 inches (15 cm) to 12 inches (30 cm) is acceptable for a taxiway centerline. However, the width selected must be uniform for the entire length of the taxiway unless it involves a surface movement guidance and control system (SMGCS) route. The centerline is continuous in length except where it intersects a holding position marking (see Figure 10) or a runway designation (see paragraph 19b(3)). When a taxiway or part of a taxiway is designated as a SMGCS route, the width of the taxiway centerline must be 12 inches (30 cm) wide and is outlined in black in light colored pavement. The centerline width of the remaining part of a taxiway that is not a part of a SMGCS route can change abruptly at the intersection with other taxiway centerline markings, e.g. from 12 inches (30 cm) to 6 inches (15 cm).

22. TAXIWAY EDGE MARKING.

a. Purpose. Taxiway edge markings are used to delineate the edge of the taxiway. They are primarily used when the usable taxiway edge does not correspond with the edge of the pavement. Two types of markings are used depending upon whether the aircraft is supposed to cross the taxiway edge. The outer edge of the stripe defines the edge of the usable pavement.

(1) Continuous Markings. Continuous taxiway edge markings are used to delineate the taxiway edge from the shoulder or some other contiguous paved surface not intended for use by aircraft (see Figure 10). When an operational need exists, the continuous taxiway edge marking may be used to delineate the edge of the taxiway from a contiguous nonpaved surface. Continuous taxiway edge markings are not to be used in situations where aircraft would be required to cross them.

(2) Dashed Markings. Dashed taxiway edge markings are used when there is an operational need to define the edge of a taxiway or taxilane on a paved surface where the pavement contiguous to the taxiway edge is intended for use by aircraft, e.g., an apron (see Figure 10). Where contiguous to an apron, the markings shall be installed at a distance equal to one-half the taxiway width from taxiway centerline. Dashed edge stripes are not to be used to provide wing tip clearances for parked aircraft on an apron. See taxiway/taxiway hold lines Par. 25, or non-movement area boundary markings Par. 38, as appropriate.

b. Location. Taxiway edge markings are located on the taxiway at its defined edge, and are part of the usable taxiway pavement.

c. Color. Taxiway edge markings are yellow.

d. Characteristics. Continuous taxiway edge markings consist of a continuous double yellow line, with each line being at least 6 inches (15 cm) in width, spaced 6 inches (15 cm) apart (edge to edge). These markings can also be used to designate islands, which have been painted green or striated with yellow markings. Dashed taxiway edge markings consist of a broken double yellow line, with each line being at least 6 inches (15 cm) in width, spaced 6 inches (15 cm) apart (edge to edge). The lines are 15 feet (4.5 m) in length with 25-foot (7.5 m) gaps (see Figure 10). These markings are not to be used to designate islands except for some very special conditions.

23. RUNWAY HOLDING POSITION MARKINGS ON TAXIWAYS.

a. Purpose. At airports with operating airport traffic control towers, these markings identify the location on a taxiway where a pilot is to stop when he/she does not have clearance to proceed onto the runway. Holding position

markings may be supplemented with Geographic Position Markings (see Paragraph 32) as part of the airport's SMGGS Plan. At airports without operating control towers these runway holding position markings identify the location where a pilot should assure there is adequate separation with other aircraft before proceeding onto the runway.

b. Location. Holding position markings should be located in accordance with Table 4 on all taxiways that intersect runways based upon the most critical aircraft using the runway. These markings are also located on taxiways crossing through the runway approach area so that an aircraft on the taxiway will not penetrate any of the following: the surface used to locate the runway threshold, inner approach obstacle free zone, inner transitional obstacle free zone, and clearway. If located closer, such that aircraft penetrate the Terminal Instrument Procedures (TERPS) surfaces, higher minimums may result. A discussion of these surfaces is contained in AC 150/5300-13. Locating holding position markings other than in accordance with the preceding criteria must be approved by the FAA. Except as specified in paragraph 17, holding position markings should not be used for any situation other than those described in this paragraph.

c. Color. Holding position markings on taxiways are yellow and will be outlined in black on light colored pavements.

d. Characteristics. Runway holding position markings consist of a set of 4 yellow lines and 3 spaces, each 12 inches (30 cm) in width, as shown in Figure 10.* The solid lines of these markings are always on the side where the aircraft is to hold. The markings are installed perpendicular to the taxiway centerline but may be canted from the perpendicular in unique situations, such as illustrated in Figure 11. In these cases, it may be necessary to install additional holding position signs, runway guard lights, etc. Holding position lines on taxiways may be angled as needed where two or more taxiways intersect at the hold line. On angled taxiways the distances given in Table 4 defines the edge of the holding position line closest to the runway centerline. On an angled taxiway, consideration should also be given to locating the markings such that no portion of an aircraft (i.e., wing tip) placed at the holding position line will penetrate the runway safety area.

*Note: At airports that do not have an airport traffic control tower and are not certificated under 14 CFR part 139, each of the four yellow lines and three spaces may be 6 inches (15 cm) in width.

24. HOLDING POSITION MARKINGS FOR INSTRUMENT LANDING SYSTEM/MICROWAVE LANDING SYSTEM (ILS/MLS) CRITICAL AREAS.

a. Purpose. These markings identify the location on a taxiway or holding bay where an aircraft is to stop when it does not have clearance to enter ILS/MLS critical areas. The critical area is the area needed to protect the navigational aid signal.

b. Location. Holding position markings for taxiways entering ILS/MLS critical areas are located at the perimeter of the ILS/MLS critical area. Where the distance between the taxiway/runway holding position and the holding position for an ILS/MLS critical area is 50 feet (15 m) or less, one holding position may be established, provided it will not affect capacity. In this case, the runway holding position is moved back to the ILS/MLS holding position and only the runway holding position markings are installed. The local FAA Airway Facilities office will designate the ILS/MLS critical area boundaries for the airport operator. The markings are installed perpendicular to the taxiway centerline but may be canted from the perpendicular in unique situations, such as illustrated in Figure 11.

c. Color. ILS/MLS holding position markings on taxiways are yellow and will be outlined in black on light colored pavements.

d. Characteristics. ILS/MLS critical area holding position markings consist of a set of two 2-foot (0.6 m) wide parallel yellow lines spaced 4 feet (1.2 m) apart, 6 inches (15 cm) from the taxiway centerline on the aircraft holding side as shown in Figure 10.* In between these two lines and perpendicular to them, there are sets of two 1-foot (0.3 m) wide parallel yellow lines 1-foot (0.3 m) apart. See Figure 10 for proper spacing dimensions.

*Note: At airports that do not have airport traffic control towers and are not certificated under 14 CFR part 139, the airport operator has the option to reduce the dimension for the width of the parallel

yellow lines and spaces from 2 feet (.6 m) to 1 foot (.3 m) and from 4 feet (1.2 m) to 2 feet (.6 m).

25. INTERMEDIATE HOLDING POSITION MARKINGS FOR TAXIWAY/TAXIWAY INTERSECTIONS.

a. Purpose. These markings identify the location on a taxiway or apron where aircraft are supposed to stop when told to hold short of another taxiway or apron. They should be used at airports with an operating ATCT where there is an operational need to hold traffic at a taxiway/taxiway intersection, at a geographic position (see paragraph 32), or holding bay, as illustrated in Figure 11, to define the edge of the taxiway object free area to assure adequate clearance from taxiing aircraft.

b. Location. Holding position markings for taxiway/taxiway intersections are located for the most demanding aircraft using the airport in accordance with Table 5.

c. Color. Holding position markings on taxiways are yellow and will be outlined in black on light colored pavements.

d. Characteristics. The holding position markings for taxiway/taxiway intersections consist of a 1-foot (0.3 m) wide yellow line with 3-foot (0.9 m) long dashes and spaces. The taxiway centerline is 6 inches (15 cm) from either side of the intermediate holding position marking, as shown in Figure 10.

26. SURFACE PAINTED HOLDING POSITION SIGNS.

a. Purpose. Surface painted holding position signs supplement the signs located at the holding position in accordance with AC 150/5340-18, *Standards for Airport Sign Systems*, current edition. This type of marking is required where the width of the holding position on the taxiway is greater than 200 feet (60 m). These markings are useful at other locations, such as where pilots have had difficulty discerning the location of the holding position.

TABLE 5. PERPENDICULAR DISTANCES FOR TAXIWAY INTERSECTION MARKINGS FROM CENTERLINE OF CROSSING TAXIWAY.

Airplane design group ¹					
I	II	III	IV	V	VI
44.5 feet	65.5 feet	93 feet	129.5 feet	160 feet	193 feet
(13.5 m)	(20 m)	(28.5 m)	(39 m)	(48.5 m)	(59 m)

¹ See AC 150/5300-13, *Airport Design*.

b. Location. The edge of the surface painted holding position sign is placed 3 feet (1 m) on the left side of each taxiway centerline on the holding side of and from 2 feet (0.67 m) to 4 feet (1.34 m) prior to the holding position marking (to allow for clearance of in-pavement runway guard lights when installed) as shown in Figure 13. Holding position signs shall not be painted on runways. A surface painted location sign may be located on the left side of the surface painted holding position sign when adequate pavement width exists. Surface painted taxiway direction signs are not to be co-located with a surface painted holding position sign. Surface painted taxiway location or direction signs shall not be located between the runway holding position marking and the runway. Additional surface painted holding position signs may be installed as a runway incursion prevention initiative.

c. Color. The surface painted holding position sign has a red background with a white inscription, and will be outlined in black on light colored pavements.

d. Characteristics. The inscription is to have a height of 12 feet (3.67m), however it may be reduced, as necessary to the minimum height of 9 feet (3m). The edge of the surface painted taxiway holding position sign should be 3 feet (1m) on the left side of the taxiway centerline. The width of the letters, numbers, and other symbols used in the inscription must be proportional to the height in order to conform in appearance to the letters, numbers, and other symbols in Appendix 1. The background is rectangular and extends a minimum of 15 inches (38 cm) laterally and vertically beyond the extremities of the inscription.

27. SURFACE PAINTED TAXIWAY DIRECTION SIGNS.

a. Purpose. Surface painted taxiway direction signs will be provided when it is not possible to provide taxiway direction signs at intersections in accordance with AC 150/5340-18 or, when necessary, to supplement such signs.

b. Location. Surface painted taxiway direction signs are 3 feet (1 m) from the centerline with signs indicating turns to the left being on the left side of the taxiway centerline and signs indicating turns to the right being on the right side of the centerline, as shown in Figure 13. Taxiway direction signs should not be painted on runways, or between a runway holding position and a runway. For taxiways intersecting at 90 degrees a surface painted taxiway direction sign is combined with arrows to indicate directions and is located on the left side of the taxiway centerline.

(1) When a direction sign is not installed along side of the taxiway, the surface painted taxiway direction sign is located at the same distance from the intersection as the distance specified in AC 150/5340-18.

(2) When a surface painted taxiway direction sign supplements a direction sign installed along side of the taxiway, the surface painted direction sign may be located at or anywhere between the distance specified in subparagraph (1) above and the point of divergence of the painted centerlines.

coordination with the regional Airports Division, the local airport traffic control tower and the

c. Color. A geographic position marking is a 7 foot (2.3 m) diameter pink circle surrounded by a 6 inch wide white ring contiguous to a 6 inch wide black outer ring, when installed on concrete or other light colored pavements as shown in Figure 17. When installed on asphalt or other dark-colored pavements, the white ring and the black ring are reversed, i.e., the white ring becomes the outer ring and the black ring becomes the inner ring.

d. Characteristics. Geographic position markings are designated with either a number or a number and letter. The number corresponds to the consecutive position of the marking on the route. When used the letter indicates the letter designation of the taxiway on which the marking is located. If a geographic position marking is located on a

regional Flight Procedures Branch will determine where these markings are needed.

taxiway with an alphanumeric designation only the alpha portion of the designation should be used for designating the geographic position markings. For example, the fourth spot on the route is located on Taxiway A7. The alphanumeric designation for this spot would be "4A." The geographic position marking is never designated with a letter followed by a number. The designation of the geographic position marking should be centered in the circle. The designation is black, has a height of 4 feet (1.3 m) and conforms in appearance to the numbers and letters in Appendix 1.

33. RESERVED.

34. RESERVED.

SECTION 4. OTHER MARKINGS.

35. APPLICATION. The markings in this section are used, as appropriate, on airports.

36. VEHICLE ROADWAY MARKINGS.

a. Purpose. The standards for vehicle roadway markings contained in this paragraph are used to delineate roadways located on or crossing areas that are also intended for use by aircraft. Markings for roadways not located on aircraft maneuvering areas should conform, whenever possible, to those in the U.S. Department of Transportation's Manual on Uniform Traffic Control Devices.

b. Location. Vehicle roadways are delineated on aircraft maneuvering areas when there is a need to define a pathway for vehicle operations. A minimum spacing of 2 feet (0.67 m) must be maintained between the roadway edge marking and the non-movement area boundary marking (see paragraph 34). Vehicle roadway markings are interrupted by taxiway markings.

c. Color. Vehicle roadway markings are white.

d. Characteristics.

(1) Vehicle roadway markings consist of a solid line to delineate each edge of the roadway and a dashed line to separate lanes within the edges

of the roadway. The edgelines and lane lines are both 6 inches (15cm) wide and the dashes for the lane lines are 15 feet (4.5 m) in length with a spacing of 25 feet (7.5 m) between dashes. These markings are illustrated in Figure 18.

(2) In lieu of the solid lines, zipper markings may be used to delineate the edges of the vehicle roadway wherever the airport's SMGCS working group or the airport operator determines the roadway edges need enhanced delineation. The zipper marking consists of two dashed lines side by side with alternating dashes that are 12 inches (30 cm) wide and 4 feet (1.3 m) in length, along each edge of the roadway as shown in Figure 18. Details of the zipper marking are shown in Figure 10.

(3) Where a roadway crosses a taxiway, a solid white stripe 2 feet (.67 m) wide is provided across the driving lane at the distances specified in Table 5 to assure adequate clearance from taxiing aircraft. When the roadway is not located on an aircraft maneuvering area, a frangibly mounted retro-reflective stop or yield sign should be installed on the right hand side of the roadway in conjunction with the solid white stripe.

37. VOR RECEIVER CHECKPOINT MARKINGS.

a. Purpose. VOR receiver checkpoint markings allow a pilot to check aircraft instruments with navigational aid signals.

b. Location. VOR receiver checkpoints should be on the airport apron or taxiways (preferably the holding bay but never on a runway) at points selected for easy access by aircraft but where other airport traffic would not be unduly obstructed. VOR receiver checkpoints normally should not be established at distances less than one-half mile from the facility, nor on unpaved areas. FAA Flight Inspection personnel determine the location for checkpoints and issue information for checkpoint descriptions in flight publications.

c. Color. The checkpoint is marked with a painted circle of the size and color as shown in Figure 19. The color of the letters and numerals on the sign are black on a yellow background.

d. Characteristics. VOR receiver checkpoints are provided with painted markings and an associated sign.

(1) Markings. The VOR receiver checkpoint is a circle 10 feet in diameter with a yellow arrow aligned toward the facility and surrounded by a 6 inch wide yellow ring contiguous to a 6 inch wide white outer ring as shown in Figure 19. When installed on concrete pavements, the interior of the circle is painted black.

(2) Sign. The sign should have an overall mounting height of not less than 20 inches (50.8 cm) and not more than 30 inches (76.2 cm). It should be located as nearly as practicable on an extension of the diameter line and faced perpendicularly to the line-of-sight of the viewer in the circle. The inscription on the sign should show the facility identification, channel, radial selected (published) for the check, and the plotted distance from the antenna (when applicable). The station identification and course numerals should be at least 7 inches (17.8 cm) high and the other letters and numerals at least 3 inches (7.6 cm) high. The sign shall be installed in accordance with the height and distance standards in AC 150/5340-18C Table 2, on an extension of the radial and faced perpendicularly to the line-of-sight of the viewer in the circle. An example follows:

BGR-VORTAC
114.8 (CH 95) 153/333
DME 3.8 NM

38. NON-MOVEMENT AREA BOUNDARY MARKING.

a. Purpose. Non-movement area boundary markings are used to delineate the movement area, i.e., area under air traffic control, from the non-movement area, i.e., area not under air traffic control. This marking should be used only when the need for this delineation is specified in the letter of agreement between the airport operator and airport traffic control tower which designates the movement area.

b. Location. A non-movement area boundary marking is located on the boundary between the movement and non-movement area. In order to provide adequate clearance for the wings of taxiing aircraft, this marking should never coincide with the edge of a taxiway.

c. Color. A non-movement area boundary marking is yellow and will be outlined in black on light colored pavements.

d. Characteristics. The non-movement area boundary marking consists of two yellow lines (one solid and one dashed) as shown in Figure 10. The solid line is located on the non-movement area side while the dashed yellow line is located on the movement area side. Each line is 6 inches (15 cm) in width with a 6 inch spacing between lines. The width of the lines and space may be doubled to 12 inches (30 cm). The use of this wider marking is strongly encouraged at locations having difficulty discerning the location of the movement area. The dashes are 3 feet (1 m) in length with a 3-foot (1 m) spacing between dashes. If a taxiway centerline intersects a non-movement area boundary marking, the boundary marking shall be 6 inches from the taxiway centerline on the aircraft holding side and 3 feet (0.9 m) from taxiway centerline on the movement area side.

39. MARKING OF TEMPORARILY RELOCATED THRESHOLDS. Information on the marking, as well as lighting, of temporarily relocated thresholds is contained in AC 150/5370-2, *Airport Safety During Construction*, and AC 150/5340-24, *Runway and Taxiway Edge Lighting System*.


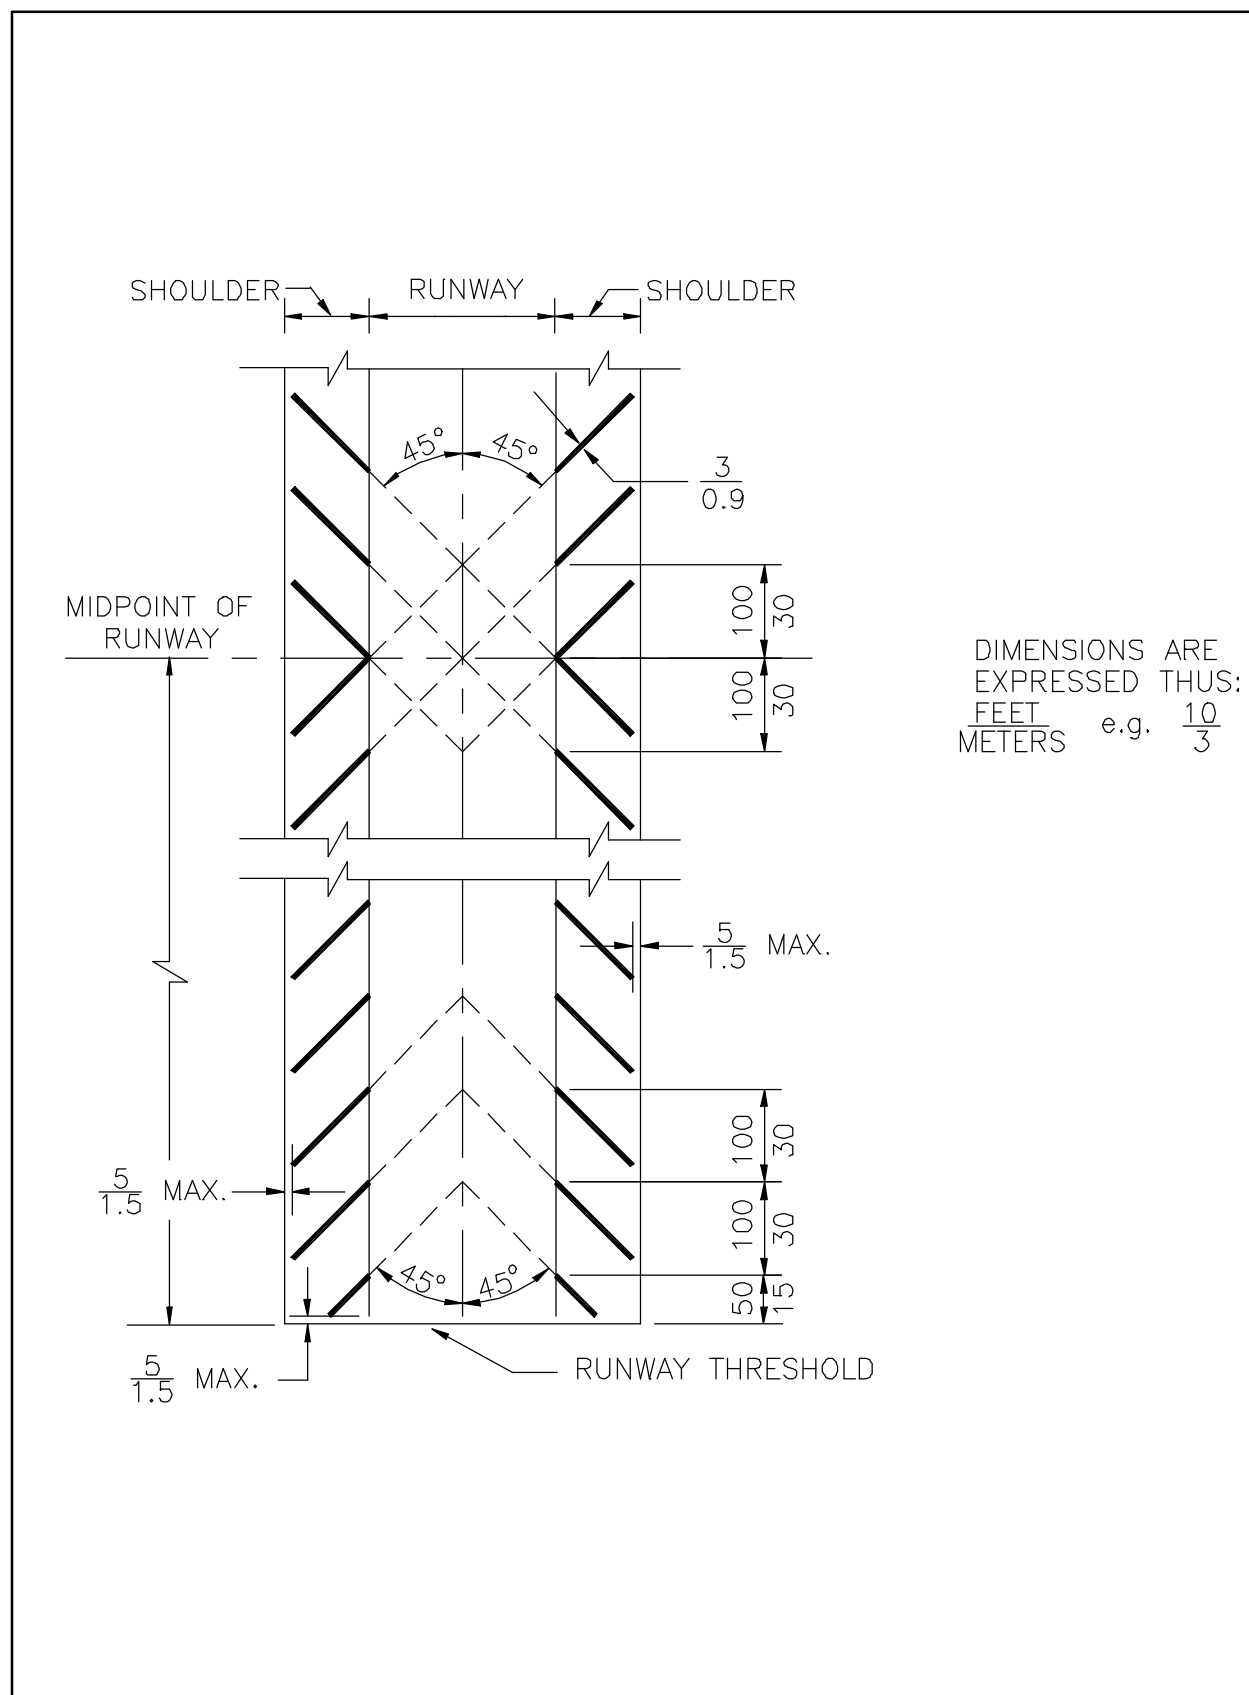


Figure 9. Runway Shoulder Markings

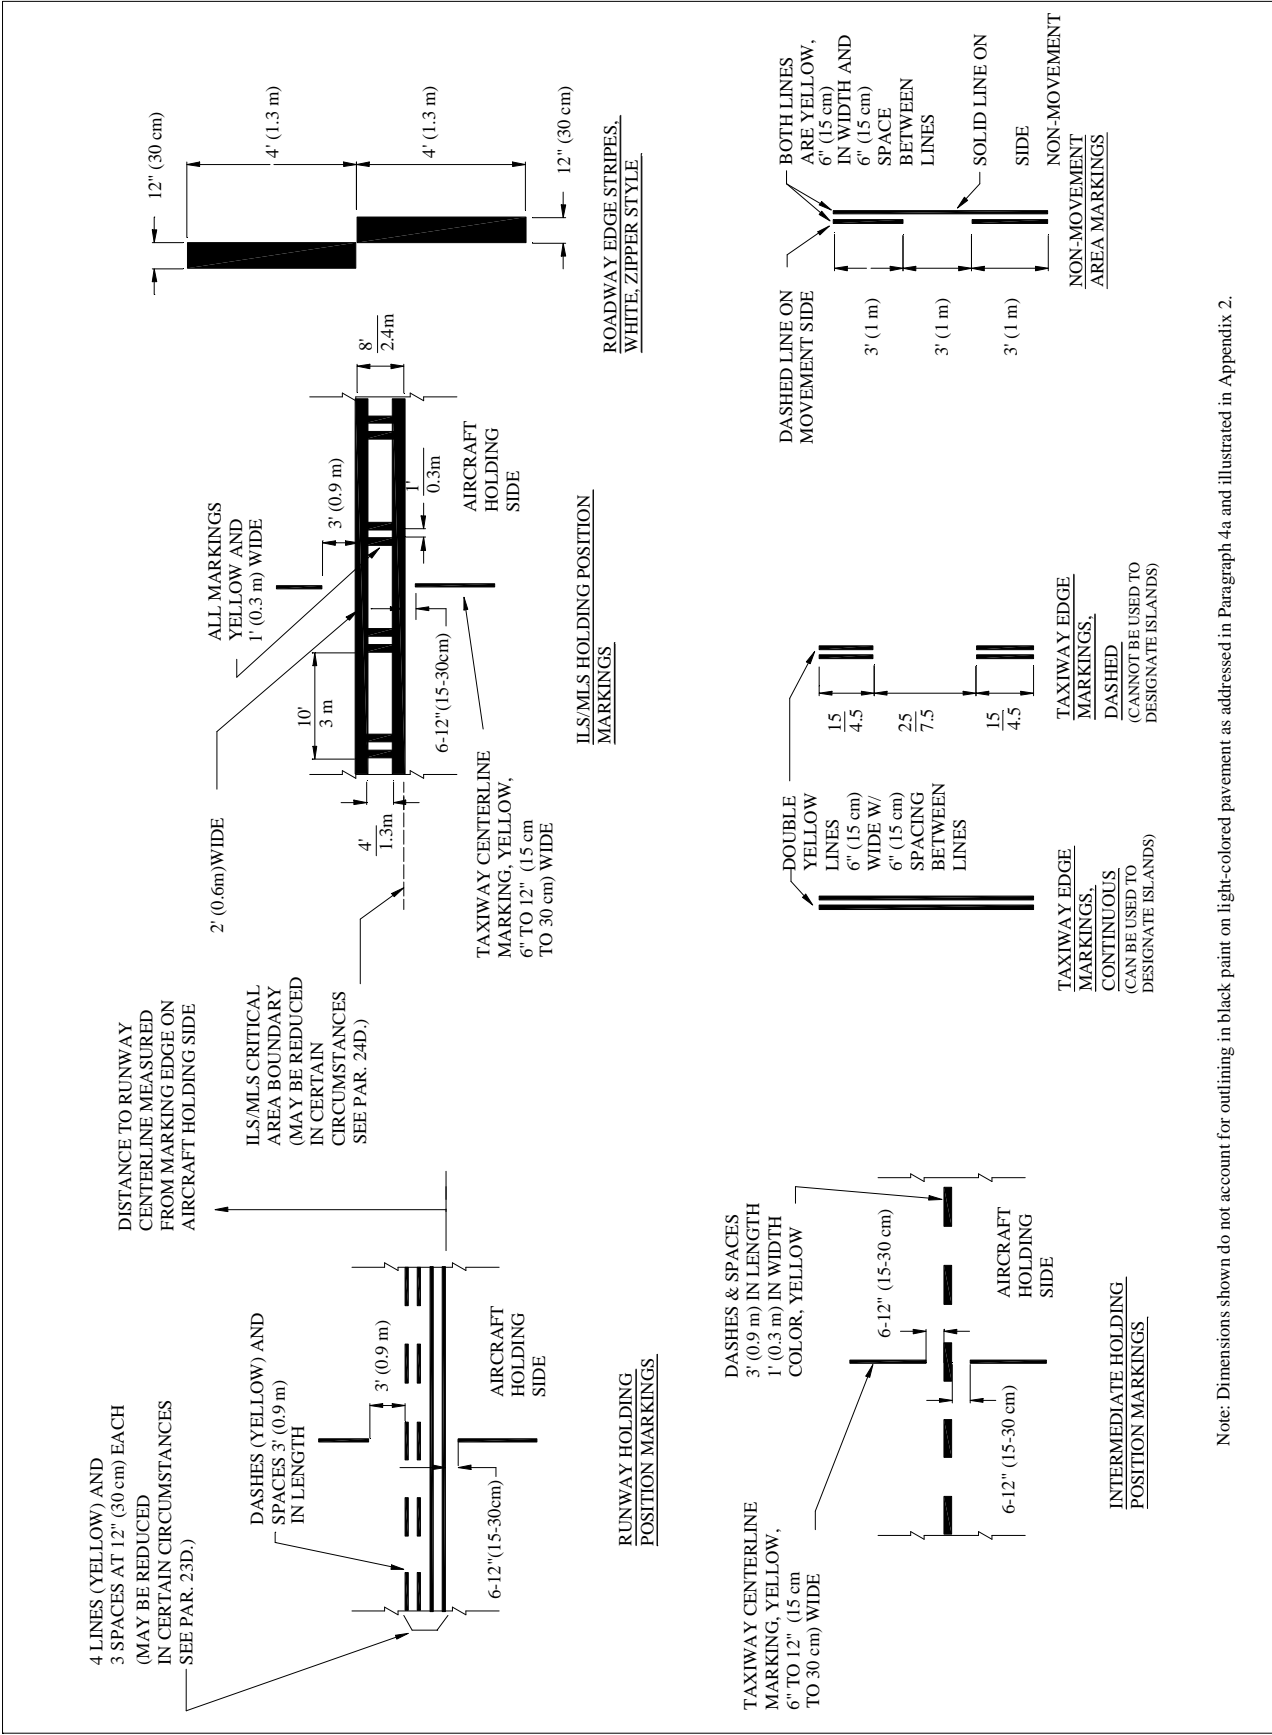

Note: Dimensions shown do not account for outlining in black paint on light-colored pavement as addressed in Paragraph 4a and illustrated in Appendix 2.

Figure 10. Marking Details

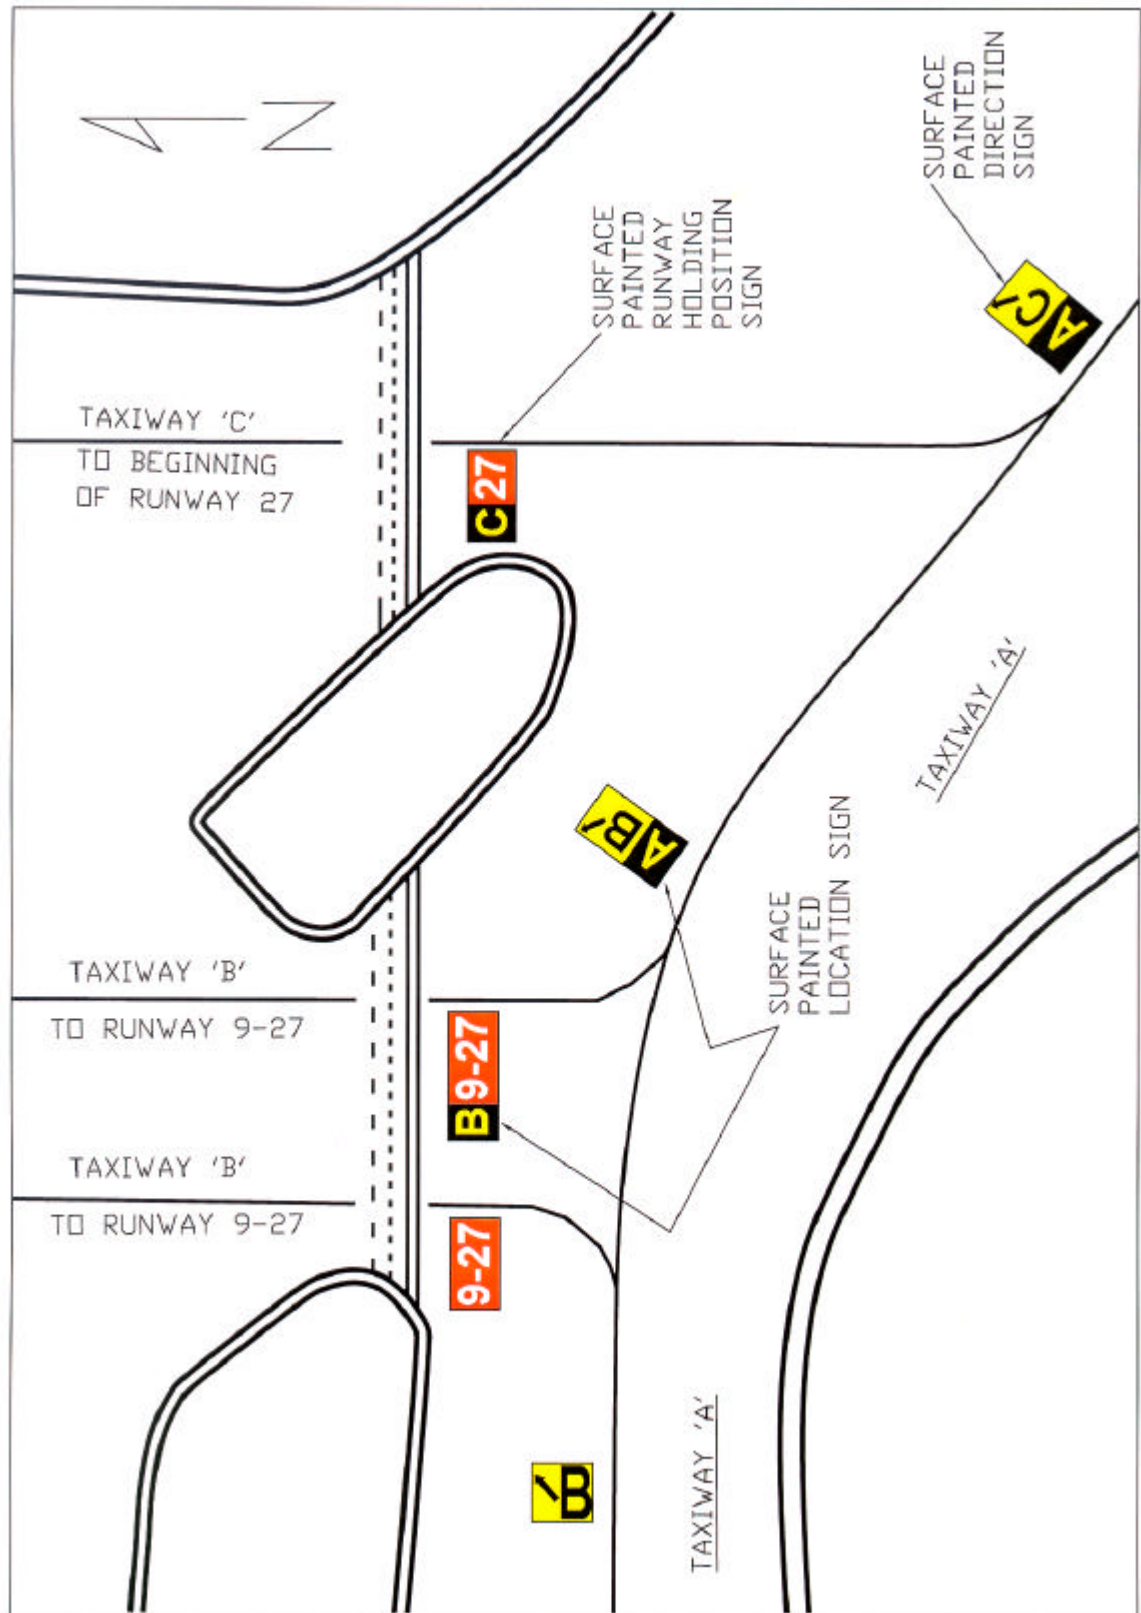


Figure 13. Surface Painted Signs

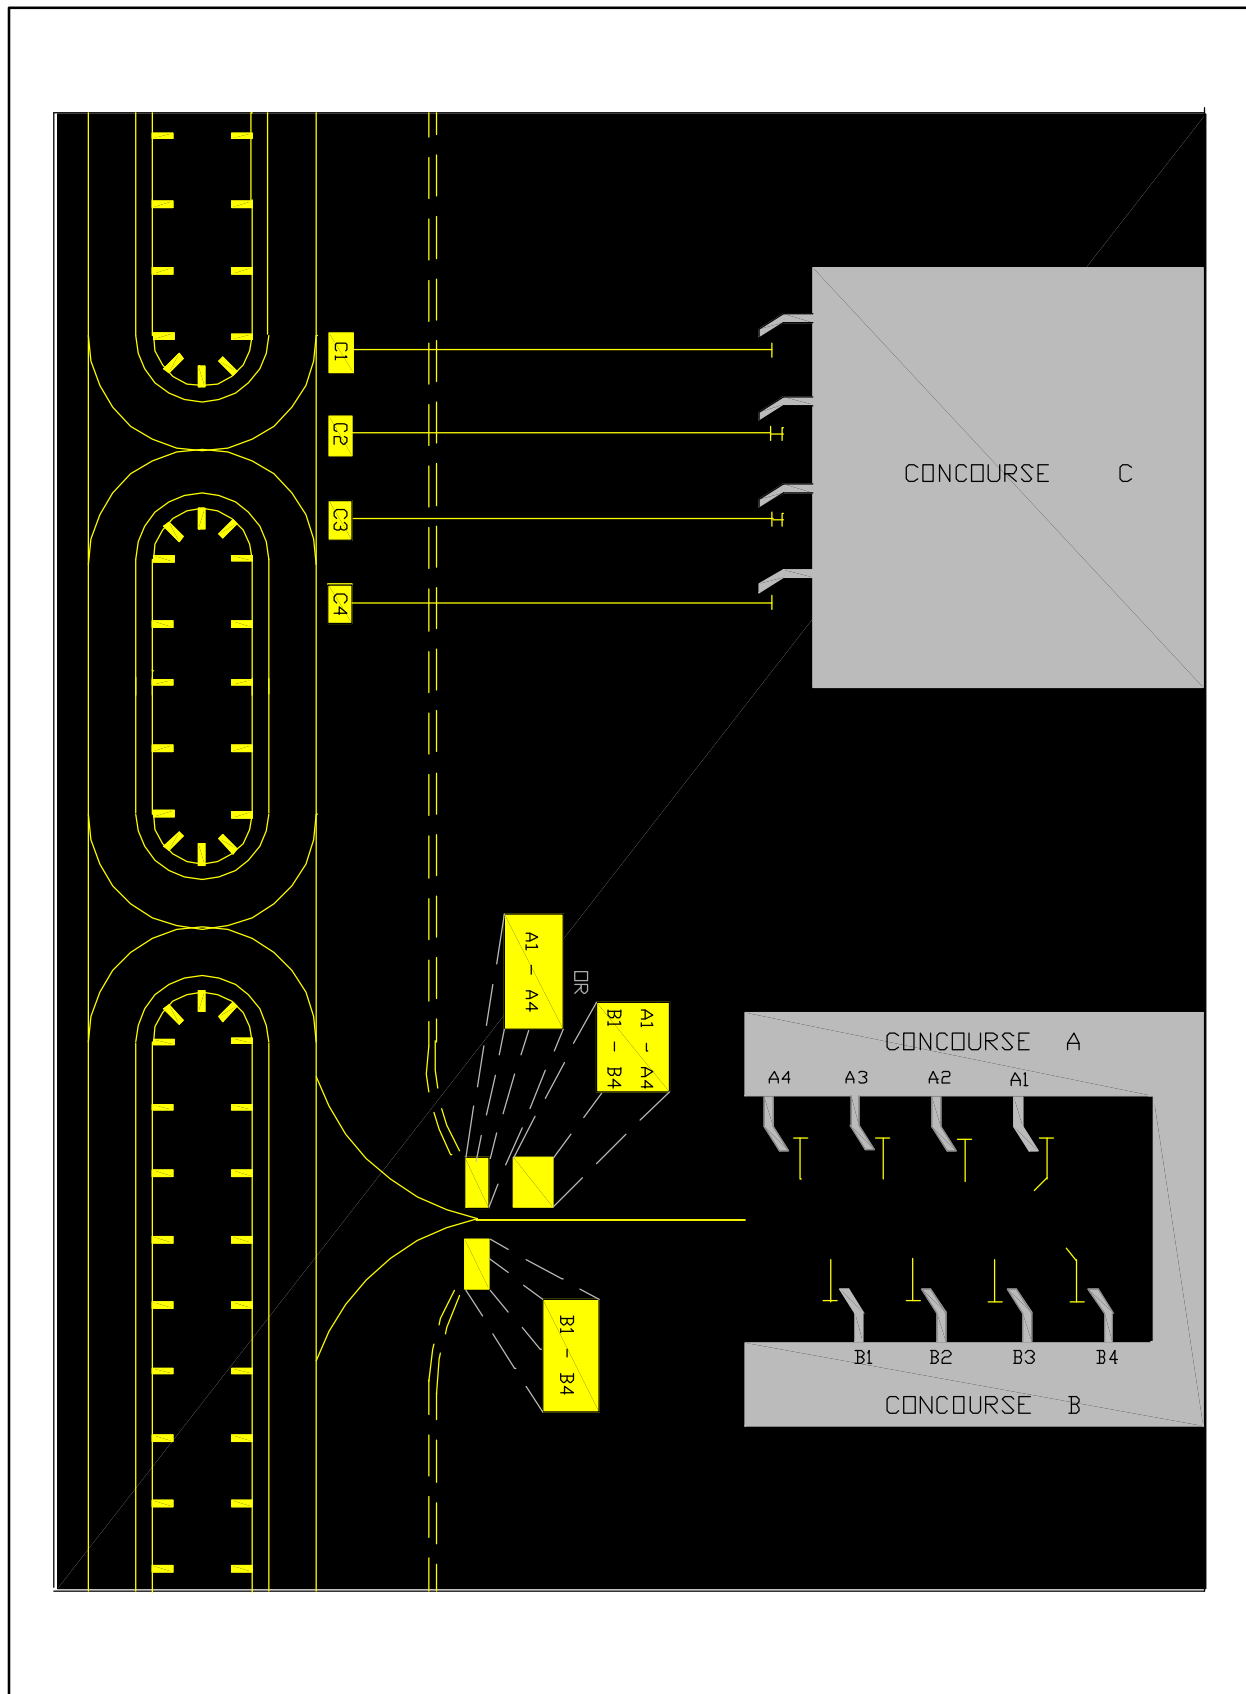


Figure 14. Surface Painted Gate Identification Signs

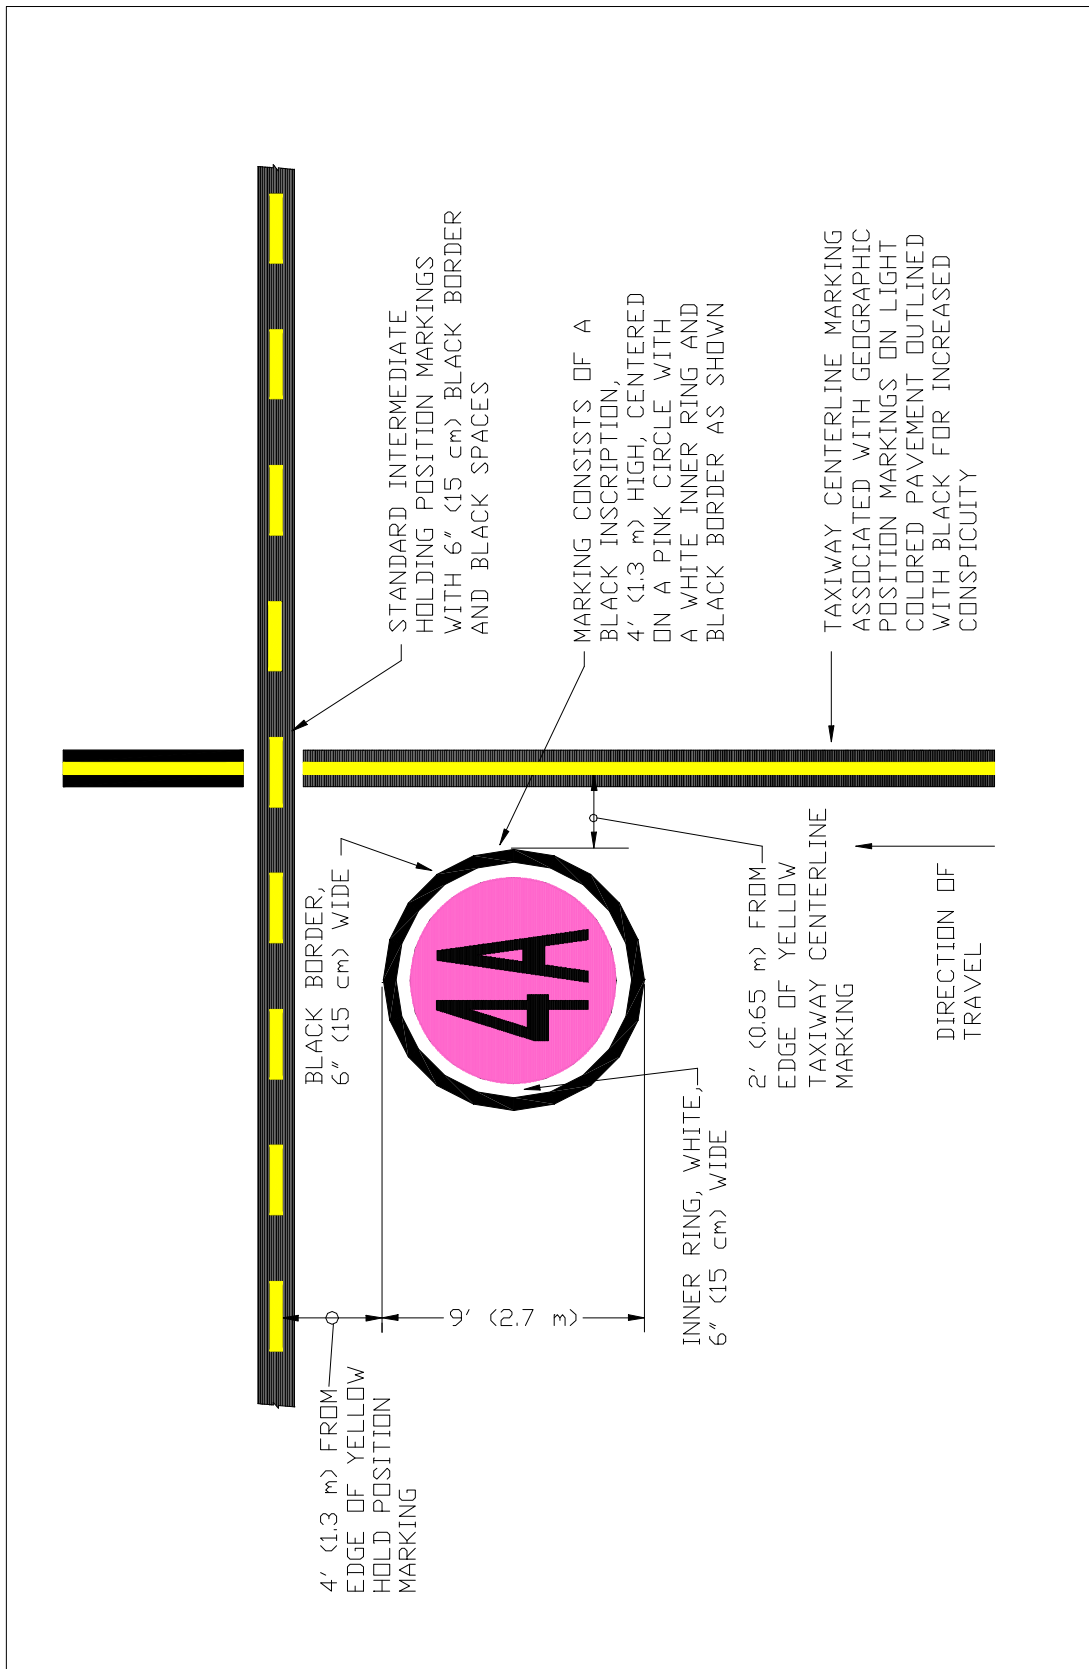


Figure 17. Geographic Position Markings

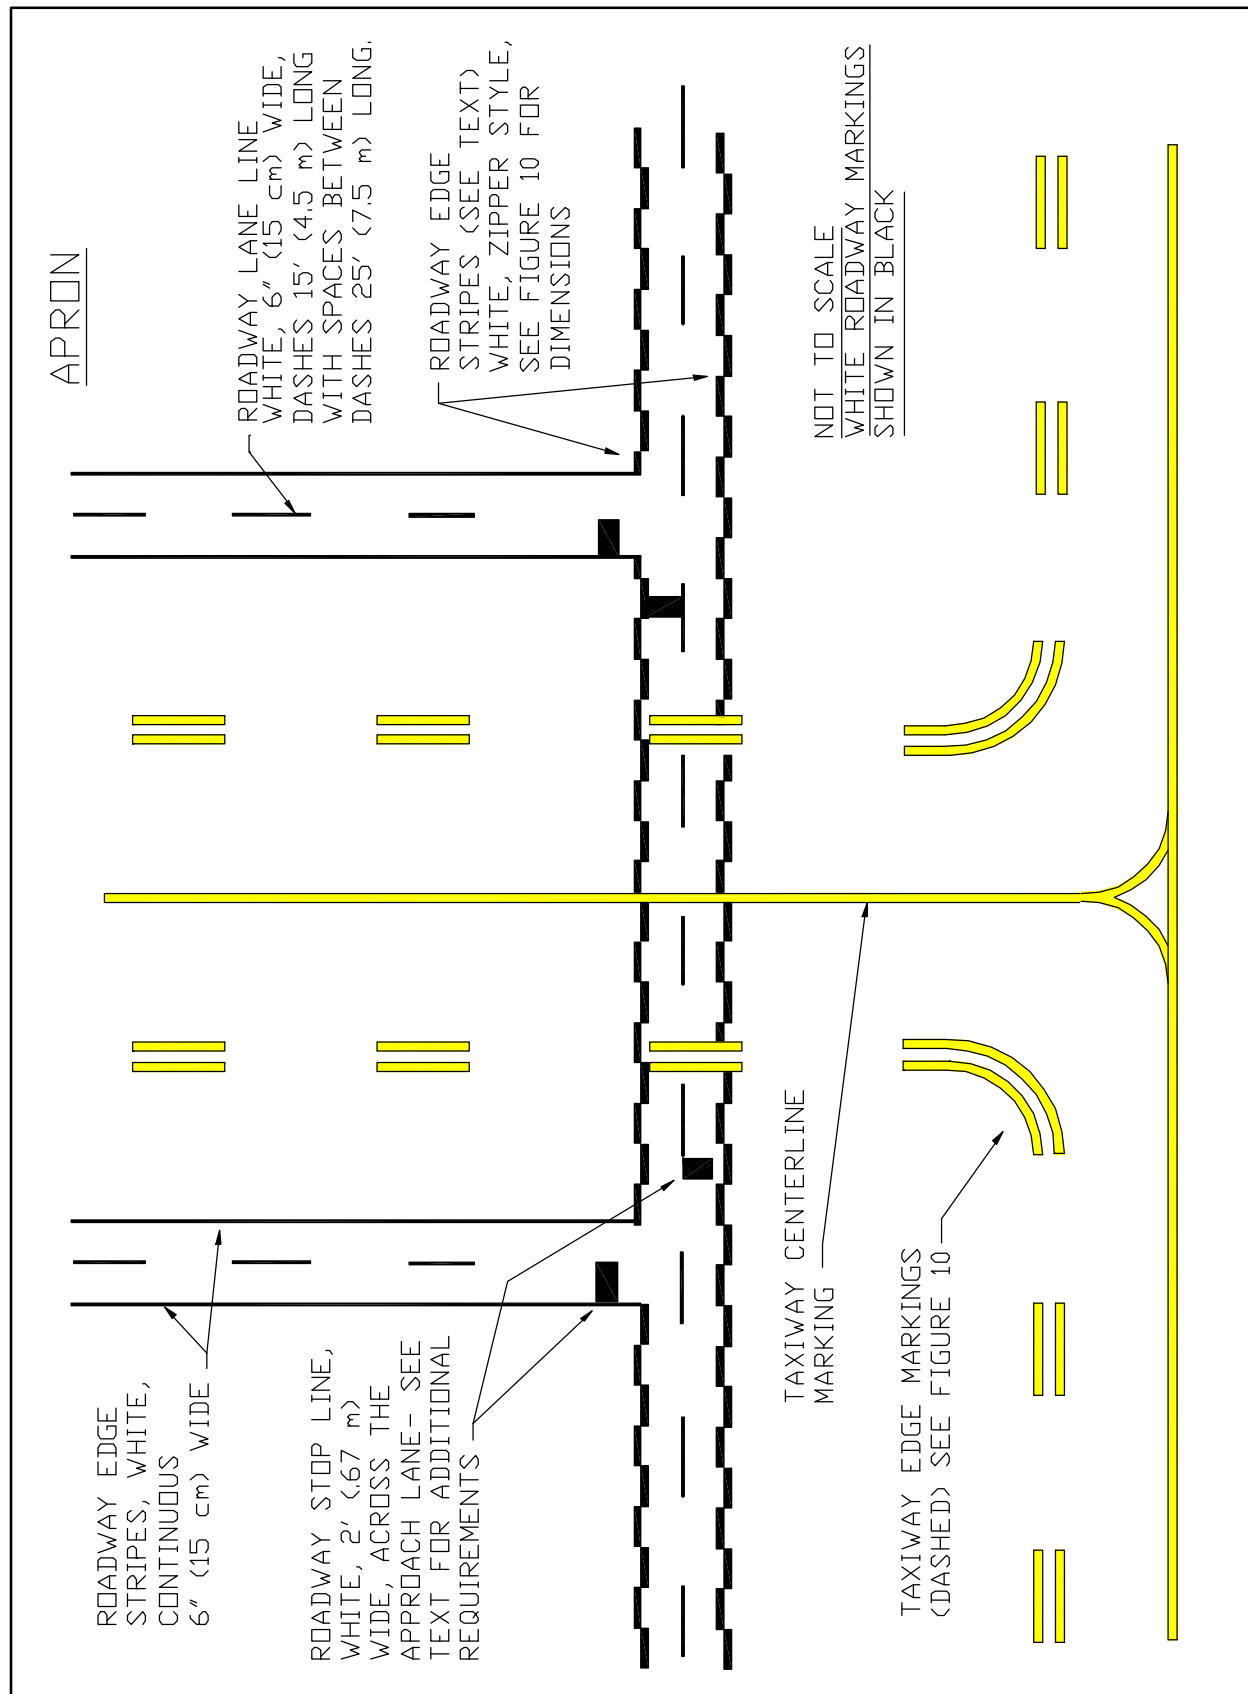


Figure 18. Vehicle Roadway Markings

APPENDIX 2. EXAMPLES OF MARKINGS OUTLINED IN BLACK

This appendix illustrates the acceptable layout for various markings outlined in black. The black paint extends at least six inches beyond the outside edge of the markings. All spaces between paint lines in markings comprised of two or more lines or dashes are painted in black as illustrated in the figures that follow. An alternate outlining pattern is provided for dashed taxiway edge line markings. These figures are not drawn to scale.

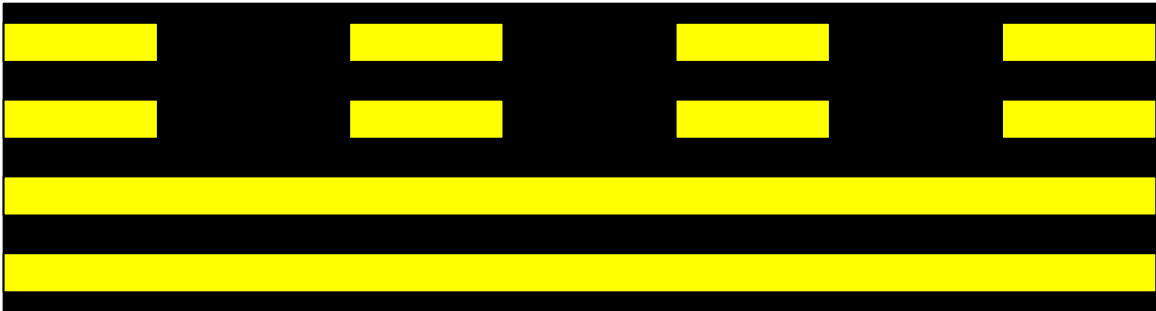


Figure B-1. Runway holding position marking

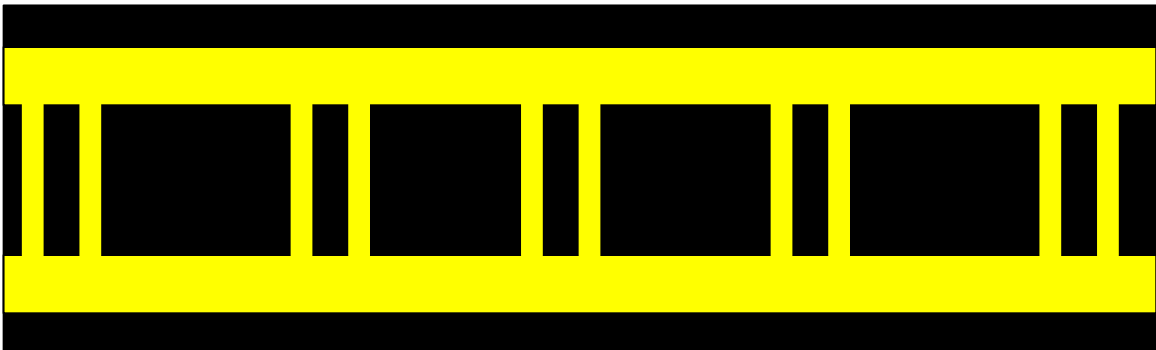


Figure B-2. ILS/MLS holding position marking



Figure B-3. Continuous taxiway edge line marking



Figure B-4. Dashed taxiway edge line marking



Figure B-5. Alternate outlining method for
dashed taxiway edge line marking



Figure B-6. Taxiway centerline marking



Figure B-7. Taxiway/taxiway hold position marking



Figure B-8. Non-movement area boundary marking